


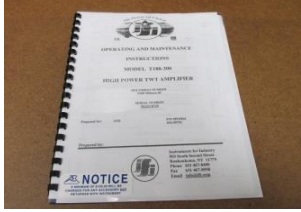






IFI-T188-300-ACCY01
Accessory Kit

Part #	Description	Qty	
IFI-T188-300-MAN01	Operating & Maintenance Manual	1	
IFI-T188-300-PC	Power Cord NEMA 5-15P to IEC C19	1	
IFI-T188-300-TERM01	Termination, 50 ohm, BNC(m)	1	





IFI-T188-300-PKG01-ACCY01
Accessory Kit

Part #	Description	Qty	
IFI-T188-300-MAN01	Operating & Maintenance Manual	1	
IFI-T188-300-PC-01	Power Cord Mil-Std Connector & 250V 30A	1	
IFI-T188-300-TERM01	Termination, 50 ohm, BNC(m)	1	



IFI-T188-500-ACCY01
Accessory Kit

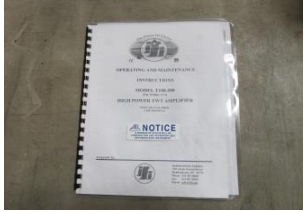Part #	Description	Qty	
IFI-T188-500-MAN01	User Operating & Maintenance Manual for IFI-T188-500	1	
IFI-T188-500-TERM01	Termination, 50ohm, BCN(m)	1	
GENE-30A, 30y, 120/208VAC	Power Cord for IFI-T188-500 GENE-30A, 30Y, 120/208VAC (MIL Standard)	1	