

# Advanced Test Equipment Rentals - www.atecorp.com 800-404-ATEC (2832)

# From the Industry Leader in Handheld Field Application Instrumentation – a Multi-Function Land Mobile Radio Tester

The LMR Master from Anritsu is a single instrument that combines all of the tools required to install, maintain, and certify Land Mobile Radio systems.



#### Easy-to-Use

In a single, lightweight, handheld, battery-operated package, the LMR Master combines the functionality of a cable and antenna analyzer, spectrum analyzer, interference analyzer, power meter, channel scanner, transmitter analyzer (P25 and iDEN), transmission analyzer for 2-port devices (built-in RF source), and GPS receiver.

This optimal combination of network test capabilities eases the job of a technician by eliminating the need for several independent test instruments, reducing the number of tools the technician must carry and learn to operate. The LMR Master is a low-cost, easy-to-use, and rugged solution designed specifically for field based technicians and engineers.


#### Rugged and Reliable

The Anritsu Handheld S412D is specifically designed for field environments and can easily withstand the day-to-day punishment of field use. The analyzer is almost impervious to the bumps and bangs typically encountered by portable field-based equipment. The battery can be changed without tools in seconds when necessary to help extend measurement time in the field.

#### Transmissive Color Display

The standard transmissive color display is viewable in direct sunlight and at wide viewing angles.

# The LMR Master is the only instrument you need for complete LMR system maintenance and trouble-shooting.

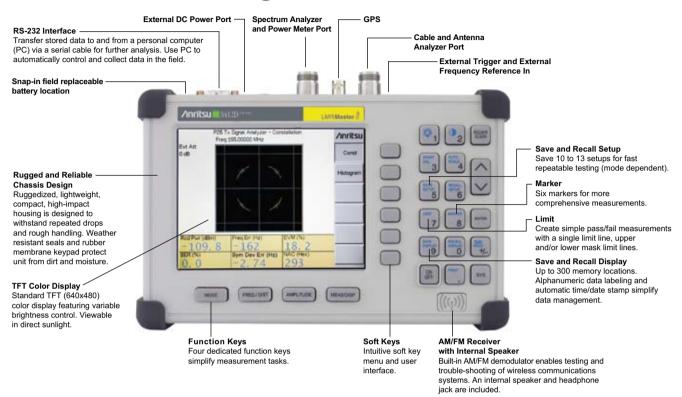

Function	Benefits			
Cable and Antenna Analyzer	Quickly finds small, hard to identify faults before major failures occur.			
Spectrum Analyzer	Easily locate, identify and record various signals with incredible accuracy.			
Power Meter	Performs accurate power measurements, reducing holes and interference.			
High Accuracy Power Meter	Perform accurate RMS power measurements for both CW and modulated signals.			
Channel Scanner	Measures frequency, bandwidth and power of multiple transmitted signals.			
Transmission Measurement	Built-in signal source to measure gain or loss of two port devices, as well as tower mounted amplifier antenna isolation measurements and repeater testing.			
Interference Analyzer	Identify and locate interfering signals that cause dropped calls and coverage problems. Intermittent problems can be identified using spectrograms.			
GPS Receiver	Built-in receiver for location information.			
P25 Signal Analyzer	RF measurements, demodulation and BER (1011 Hz pattern) help the technician to quickly check LMR system performance.			
P25 Talk-Out Coverage Measurements	Received Power and BER (1011 Hz pattern) along with GPS location and time.			
iDEN Signal Analyzer	RF and demodulation measurements to monitor iDEN/WiDEN.			
Variable Bias Tee	Eliminates the need for an external power supply when biasing tower mounted amplifier.			

# Cable and Antenna Analysis – Increase System Uptime

The LMR Master cable and antenna analyzer uses Frequency Domain Reflectometry (FDR) to help technicians and wireless field engineers detect cable, feedline and antenna system problems before they become costly, time-consuming system failures. Superior immunity to ambient RF levels, and excellent directivity and source match ensure accurate and repeatable measurements.


#### FDR Technique

Frequency Domain Reflectometry (FDR) and Time Domain Reflectometry (TDR) have similar acronyms, and both techniques are used to test transmission lines. But, that's where the similarities end. TDRs are not sensitive to RF problems: the TDR stimulus is a DC pulse, not RF. Thus, TDRs are unable to detect system faults that often lead to system failures. Additionally, FDR techniques save costly, time-consuming trouble shooting efforts by testing cable feedline and antenna systems at their proper operating frequency.

Deficient connectors, lightning arrestors, cables, jumpers or antennas can be replaced before call quality is compromised.


#### Quick, Simple Measurements

LMR Master performs various RF measurements aimed at simplifying cable feedline and antenna system analysis: Return Loss, SWR, Cable Loss and Distance-to-Fault (DTF). A single softkey selection on the main menu activates the desired measurement mode.

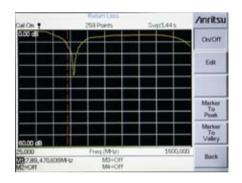

#### Return Loss, SWR


Return Loss measures the signal energy that is "reflected" or returned back to where it came from. VSWR (Voltage Standing Wave Ratio) is another method to measure the reflections. Return Loss and SWR "system" measurements ensure conformance to system performance engineering specifications. Measurements can easily be toggled between the two modes and can be performed without climbing the tower.

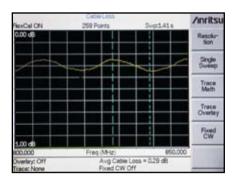

#### Cable Loss

Cable Loss measures the RF energy that is lost to heat and leakage as the signal travels down the cable. Insertion loss can be verified prior to deployment, when you have access to both ends of the cable, or on installed cables with access to the opposite end.

The S412D LMR Master automatically calculates and displays the average cable loss so there's no more guess work or need for complicated calculations in the field.

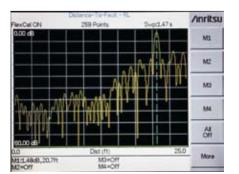

#### Distance-to-Fault

Although a Return Loss test can show users the magnitude of signal reflections, it can not show the precise location of a fault within the cable and antenna system. Distance-To-Fault measurements provide the clearest indication of trouble areas as it shows both the magnitude of the signal reflection and the location of the signal anomaly.


Distance-To-Fault can easily identify connector transitions, jumpers and kinks in the cable and antenna system. Return Loss/SWR measurement data is processed using Fast Fourier Transform and the resulting data indicates Return Loss/SWR versus distance.

## Spectrum Analysis – Anywhere, Anytime

The S412D LMR Master integrated spectrum analysis capability provides the "ultimate" in measurement flexibility for field environments and applications requiring mobility. With the S412D you can locate, identify, record and solve communication systems problems quickly and easily, and with incredible accuracy – making it a perfect solution for conducting field measurements in the 100 kHz to 1.6 GHz frequency range.


#### **Smart Measurements**

The LMR Master has dedicated routines for smart measurements of field strength, channel power, occupied bandwidth, Adjacent Channel Power Ratio (ACPR), Carrier-to-Interference and interference analysis. These are increasingly critical measurements for today's wireless communication systems. The simple interface for these complex measurements significantly reduces test time and increases analyzer usability.

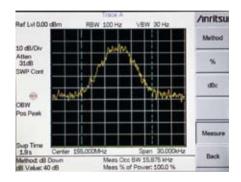

#### Occupied Bandwidth

This measurement calculates the bandwidth containing the total integrated power occupied in a given signal bandwidth. There are two different methods of calculation depending on the technique used to modulate the carrier. The user can specify percent of power or the "x" dB down point, where "x" can be from 1 dB to 120 dB below the carrier.

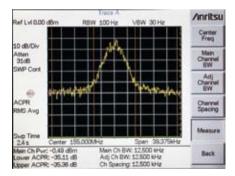

#### Adjacent Channel Power Ratio

A common transmitter measurement is that of adjacent channel leakage power. This is the ratio of the amount of leakage power in an adjacent channel to the total transmitted power in the main channel. This measurement is used to replace the traditional two-tone intermodulation distortion (IMD) test for system non-linear behavior.

The result of an ACPR measurement can be expressed either as a power ratio or a power density. In order to calculate the upper and lower adjacent channel values, the LMR Master allows the adjustment of four parameters to meet specific measurement needs: main channel center frequency, measurement channel bandwidth, adjacent channel bandwidth and channel spacing. When an air interface standard and channel are specified in the S412D, all these values are automatically set to the normal values for that standard.

#### AM/FM Demodulator

A built-in demodulator for AM, narrowband FM, wideband FM and single sideband (selectable USB and LSB) allows easy identification of interfering signals.

## Transmitter Performance Monitoring Made Simple


General purpose test equipment cannot measure all the important parameters of a wireless network. RF technicians and engineers need more sophisticated products to maintain and trouble shoot repeaters. Bench top, fully-featured laboratory design, development and compliance instruments are expensive, big, bulky and very complicated to operate. RF technicians and engineers need an integrated, handheld, multi-function, battery-operated and easy to use product to check repeater performance.

RF measurements (P25 and iDEN) give a general idea of how strong the transmitting signal is and whether the repeater is transmitting at the designated frequency. The LMR Master demodulates the P25 and iDEN signals by connecting to the repeater, or using an over the air antenna.



Built-in AM/FM demodulator and internal speaker enhance testing and trouble-shooting of wireless communications systems.




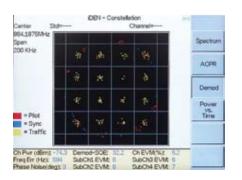


# iDEN Signal Analyzer Measurements (Option 0068)


The S412D LMR Master provides a dedicated measurement mode to test performance of iDEN repeaters. This option includes RF and Demodulation measurements of iDEN and WiDEN signals.

## Direct Connect or Over The Air

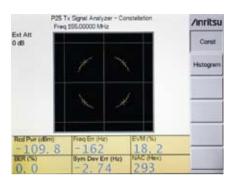

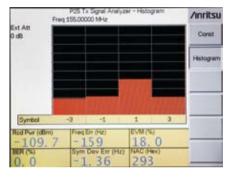

# | P25 Telk-Out Coverage - RSSI vt. Time | Freq 195.0000/Hz | RSSI vt. Time | Freq 195.0000/Hz | RSSI vt. Time | RSSI vt. Time

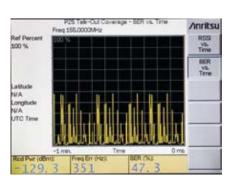

#### P25 Tx Signal Analyzer (Option 0520)

P25 RF measurements are: frequency error, received power, EVM, Symbol Deviation Error, NAC and BER (1011 Hz pattern). The LMR Master displays Constellation or Histogram.

# P25 Talk-Out Coverage Measurements (Option 0522)

The LMR Master S412D supports coverage mapping with received power and BER (1011 test pattern) measurements along with GPS location and time. The S412D can accurately measure BER down to realistic –120 dBm signal levels. BER coverage maps provide confidence that communications will be possible even with local interference or multipath. Displays can be automatically stored, providing up to 8 hours of internally stored measurements. Master Software Tools can be used to convert stored traces to comma delimited ASCII files containing GPS location/time, RSSI, and BER.

#### P25 Talk-Out Coverage RSSI vs. Time Display

A RSSI (Received Signal Strength) Level vs. Time Display is available in the Talk-Out Coverage Mode.


#### P25 Talk-Out BER vs. Time Display

A BER vs. Time Display is available in the Talk-Out Coverage Mode.

# Built-in Multi-Functions to Increase Technician \ Productivity


GPS provides location and UTC time information.



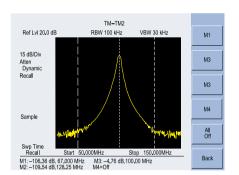


#### Transmission Measurement (Option 0021)

Transmission Measurement is a two-port measurement covering the 25 MHz to 1.6 GHz frequency range. It is a signal source providing the ability to measure loss or gain of two-port devices such as filters, cables, attenuators, duplexers and tower mounted amplifiers. Transmission measurement can also be used to make antenna-to-antenna isolation measurements and for repeater testing.

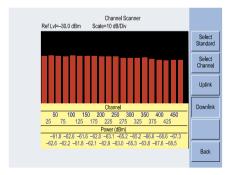

#### Channel Scanner (Option 0027)

The Channel Scanner option measures the power of multiple transmitted signals, and is very useful for measuring channel power in P25 and iDEN systems.

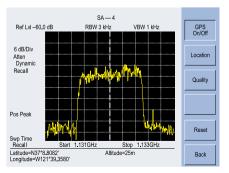

# Built-in GPS Provides Location Information (Option 0031)


GPS provides location (latitude, longitude, altitude) and UTC time information. The LMR Master can stamp each trace with location information to check if the measurements were taken at the right location. The LMR Master stores the GPS location information until the unit is turned off, so that the stored location information can be used to stamp traces taken indoors at the same cell site location. The GPS option is offered with a magnet mount antenna with a  $15 \text{ foot } (\sim 5 \text{ m})$  cable to mount on a car or other handy surface.

# Interference Analysis – Critical to Wireless Networks

The LMR Master interference analyzer option provides technicians and field engineers the ability to identify and locate interfering signals that affect quality of service. The LMR Master, with built-in preamplifier, can measure signals down to -135 dBm.





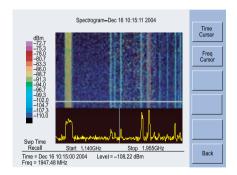

#### Ref Lvl –40.0 dBm RBW 30 kHz VBW 10 kHz 10 dB/Div Atten 11dB SWP Cont Time Span Auto Scale Auto Scale Data Off/On AMP Msr Dur Manual —1m,0s,150 ms Time 0ms Min RSSI –99,34 Min RSSI –95.57 Back

#### Interference Analyzer (Option 0025)

#### Spectrogram

The LMR Master Spectrogram is a three dimensional display of frequency, power and time of the spectrum activity to identify intermittent interference and track signal levels over time.

The LMR Master can store up to three days worth of measurements.


#### **RSSI**

RSSI measurement is useful to observe the signal strength of a single frequency over time. The data can be collected for up to seven days.

#### Locating an Interfering Signal

Connect a directional antenna to the LMR Master and locate the interfering source by measuring the strength of the interfering signal. Signal strength is indicated as an audible beep.

# LMR Master Makes High Accuracy Power Measurements

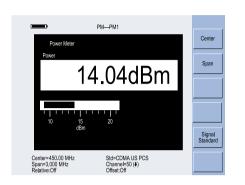

#### Power Meter (Standard)

The power meter frequency range of 3 MHz to 1.6 GHz performs accurate transmitter power measurements reducing coverage holes and interference. The measured power is the channel based power and the span can be set from 3 MHz to 1.6 GHz. The power can be displayed in dBm or Watts. An external detector is not required for this measurement.

# High Accuracy Power Meter (Option 0019)

Anritsu's PSN50 sensor makes high accuracy power measurements from 50 MHz to 6 GHz. The sensor provides true RMS measurements from –30 to +20 dBm, enabling users to make accurate measurements for CW and digitally modulated signals such as CDMA/EV-DO, GSM/EDGE, and WCDMA/HSDPA. The sensor is equipped with an RS-232 interface for fast and easy connection to the LMR Master. Power is displayed in both dBm and Watts. Upper and lower limits can be set for Pass/Fail measurements.





#### Power Monitor (Option 0005)

The optional Power Monitor features precision, high return loss (low SWR) detectors which can go up to 50 GHz. This excellent impedance match significantly reduces the largest component of power measurement error, mismatch uncertainty. Display formats include absolute power (dBm or Watts) and relative power (dBr or %). Built-in Auto-Averaging automatically reduces the effects of noise while zeroing control allows optimum measurement accuracy at low power levels.

#### Bias Tee (Option 0010)

The optional bias tee is integrated into the LMR Master and is designed for applications where both DC and RF signals must be applied to a device under test, such as a tower mounted amplifier (TMA).

### Master Software Tools™

Master Software Tools provides the user with comprehensive data management and post processing tools which augment the capabilities of the LMR Master. This software provides a simple and easy way to manage, archive, analyze, print measurement reports, customize your cable list, antenna list, signal standards list and keep your LMR Master up to date with the latest instrument firmware.

In addition, Master Software Tools can log RSSI or BER measurements and GPS location/time into PC. The user can easily transfer the comma delimited file into their mapping software. For the most current version of Master Software Tools, please visit www.us.anritsu.com.

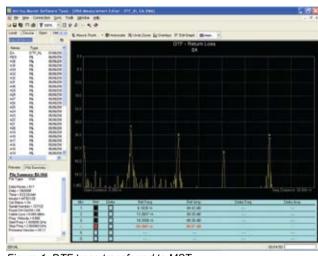


Figure 1. DTF trace transferred to MST

# With Master Software Tools<sup>™</sup> (Windows<sup>®</sup> 2000/XP compatible) you can:

- Download and archive all measurements stored in the LMR Master's internal memory with a single menu selection.
- Build historical records with an unlimited number of traces in one document
- Intelligent Trace Renaming features allow you to rename hundreds of traces in minutes instead of hours.
- Edit and create custom signal standards and cable lists
- Create custom reports
- View Spectrogram displays in 3D
- Copy markers and limit lines from one trace to all the traces in a specific folder with easy to use group edit functions.
- Use the Product Update feature to make sure you always use the latest instrument firmware.
- Coordinate cell site locations using Microsoft® MapPoint® and GPS location mapping.
- Export plot data as text files for use in spreadsheets or graphic files (JPG format).

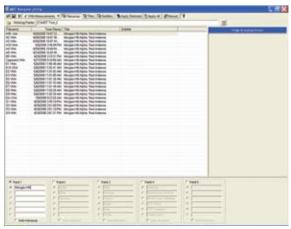


Figure 2, Update file names with the Trace Rename utility

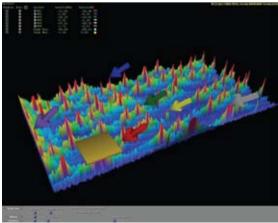


Figure 3, View Spectrogram displays in 3D

## **Specifications**

Cable and Antenna Analyzer Frequency Range: 25 MHz to 1.6 GHz Frequency Accuracy: ±50 ppm @ +25 °C Frequency Resolution: 1 kHz (CW On) 100 kHz (CW Off) Output Power: < 0 dBm (-10 dBm nominal) Immunity to Interfering Signals: On-channel +17 dBm On-frequency -5 dBm Measurement Speed: ≤2.5 msec / data point (CW ON) Number of Data Points: 130, 259, 517 Return Loss: Range: 0.00 to 60.00 dB Resolution: 0.01 dB VSWR: Range: 1.00 to 65.00 Resolution: 0.01 Cable Loss: Range: 0.00 to 30.00 dB Resolution: 0.01 dB Measurement Accuracy: >42 dB corrected directivity after calibration Distance-To-Fault: Vertical Range: Return Loss: 0.00 to 60.00 dB VSWR: 1.00 to 65.00 Horizontal Range: 0 to (# of data pts -1) x Resolution to a maximum of 1497 m (4912 ft), # of data pts = 130, 259 or 517 Horizontal Resolution (Rectangular windowing): Resolution (meter) = (1.5 x 10<sup>8</sup>) x (V<sub>p</sub>)/DF Where V<sub>p</sub> is the cable's relative propagation velocity and where DF is the stop frequency minus the start frequency (in Hz) Spectrum Analyzer Frequency: Frequency Range: 100 kHz to 1.6 GHz (tuneable to 9 kHz) Frequency Reference (Internal Timebase): Aging: ±1 ppm/yr Accuracy: ±2 ppm Frequency Span: 10 Hz to 1.59 GHz in 1, 2, 5 step selections in auto mode, plus zero span Sweep Time: ≤1.3 sec full span; ≤50 µsec to 20 sec zero span Resolution Bandwidth (-3 dB): 100 Hz to 1 MHz in 1-3 sequence ±5% Accuracy Video Bandwidth (-3 dB): 3 Hz to 1 MHz in 1-3 sequence SSB Phase Noise (1 GHz) @ 30 kHz Offset: ≤-75 dBc/Hz Spurious Responses Input Related: ≤-45 dBc Spurious Residual Responses: ≤-90 dBm, ≥10 MHz ≤-80 dBm, <10 MHz (10 kHz RBW, pre-amp on) Amplitude: Total Level Accuracy: ±1 dB typical (±1.5 dB max), ≥10 MHz to 1.6 GHz ±2 dB typical <10 MHz for input signal levels -60 dBm, excluding input VSWR mismatch Measurement Range: +20 dBm to -135 dBm Input Attenuator Range: 0 to 51 dB, selected manually or automatically coupled to the reference level. Resolution in 1 dB steps. Displayed Average Noise Level: ≤-135 dBm, ≥10 MHz (preamp on) ≤-115 dBm, <10 MHz (preamp on) for input terminated, 0 dB attenuation, RMS detection, 100 Hz RBW Dynamic Range: >65 dB, typical Display Range: 1 to 15 dB/division, in 1 dB steps, 10 divisions displayed Scale Units: dBm, dBV, dBmV, dBµV, V, W RF Input VSWR: (with ≥20 dB atten.) 1.5:1 typical, (10 MHz to 1.6 GHz) AM/FM Demodulator

Standard Speaker and Headphone Jack Frequency Range: 4.5 MHz to 1.6 GHz Display Range: -80 dBm to +80 dBm Measurement Range: -80 dBm to +20 dBm (+80 dBm with external attenuator) Offset Range: 0 to +60 dB Accuracy\*\*: ±1 dB typical (±1.5 dB max), ≥10 MHz to 1.6 GHz ±2 dB typical <10 MHz VSWR: 1.5:1 typical (Pin > -30 dBm, >10 MHz to 1.6 GHz) Maximum Power: +20 dBm (0.1W) without external attenuator

Display Range: -80 to +80 dBm (10 pW to 100 kW) Measurement Range: -50 to +16 dBm (10 nW to 40 nW) Offset Range: 0 to +60 dB Resolution: 0.1 dB, 0.1 xW Measurement Accuracy: ±1 dB maximum for >-40 dBm and <18 GHz Bias Tee (Option 0010) Voltage: +12 to +24V Max Power: 6 W (steady state) Max Current: 6/Voltage (steady state) High Accuracy Power Meter PSN50 (Option 0019) Sensor: Measurement Range: -30 to +20 dBm Frequency Range: 50 MHz to 6 GHz Input Connector: Type N, male, 50  $\Omega$ Max Input Without Damage: +33 dBm, ±25 VDC Input Return Loss: 50 MHz to 2 GHz: ≥26 dB 2 GHz to 6 GHz: ≥20 dB Accuracy: Total RSS Measurement Uncertainty (0 to 50 °C): ±0.16 dB\* Noise: 20 nW max Zero Set: 20 nW Zero Drift: 10 nW max\*\* Sensor Linearity: ±0.13 dB max Instrumentation Accuracy: 0.00 dB Sensor Cal Factor Uncertainty: ±0.06 dB Temperature Compensation: ±0.06 dB max Continuous Digital Modulation Uncertainty: +0.06 dB (+17 to +20 dBm) System: Measurement Resolution: 0.01 dB Offset Range: +60 dB Power Requirements: Supply Voltage: 8 to 18 Vdc Supply Current: <100 mA Excludes mismatch errors. Excludes noise, zero set, zero drift for levels <-20 dBm. Excludes digital modulation uncertainty between +17 and +20 dBm. \*\* After 30 min warm-up Transmission Measurement (Option 0021) RF Source: Frequency Range: 25 MHz to 1.6 GHz Frequency Resolution: 10 Hz

Output Power Level: -10 dBm typical Dynamic Range: 80 dB

Output Impedance: 50  $\Omega$ 

Power Monitor (Option 0005)

Interference Analyzer (Option 0025)

Identify Interference type

Audible tone - Strength of the Interferer

Spectrogram

Channel Scanner (Option 0027) Frequency Range: 100 kHz to 1.6 GHz

Frequency Accuracy: ±10 Hz + Time base error, 99% Confidence level

Measurement Range: +20 dBm to -110 dBm Channel Power: ±1 dB typical (±1.5 dB max) Adjacent Channel Power Accuracy: ±0.75 dBc

## Specifications (Continued)

GPS (Option 0031)

**GPS Location Indicator** 

Latitude, Longitude and Altitude on Display Latitude, Longitude and Altitude with trace storage

P25 Tx Signal Analyzer (Option 0520)

Modulation: C4FM Received Power Frequency Error Symbol Deviation Error

NAC

BER (1011 Hz pattern)

EVM

Graphs: Constellation, Histogram

P25 Talk-Out Coverage Measurements (Option 0522)

Received power or BER (1011 test pattern), along with GPS location and time

iDEN Signal Analyzer (Option 0068)

Modulation Type: 16 QAM

Frequency Error: ±0.05 ppm+time, Base Error: 99% confidence level

Channel Power: ±1.5 dB

General

Language Support: English

Internal Trace Memory: Up to 300 traces

Setup Configurations:

S412D: 15 to 40 setups (VNA-10, SPA/TM-5, Power Meter-5, High Accuracy Power Meter-5,

IA-5, Channel Scanner-5, P25-5)

Display: TFT Color display, viewable in sunlight

Inputs and Outputs Ports:

RF Out: Type N, female, 50 Ω

Maximum Input without Damage: +20 dBm, ±50 VDC

RF In: Type N, female, 50  $\Omega$ 

Maximum Input without Damage: +43 dBm (Peak), ±50 VDC

Ext. Trig In: BNC, female (5V TTL)

Ext. Freg Ref In (2 to 20 MHz): Shared BNC, female, 50 Ω, (-15 dBm to +10 dBm)

GPS Antenna: reverse BNC

Serial Interface: RS-232 9 pin D-sub, three wire serial

Electromagnetic Compatibility: Meets European Community requirements for CE marking

Safety: Conforms to EN 61010-1 for Class 1 portable equipment

Temperature:

Operating: -10 °C to 55 °C, humidity 85% or less

Non-operating: -51 °C to +71 °C (Recommend the battery be stored separately

between 0 °C and +40 °C for any prolonged non-operating storage period.)

Power Supply

External DC Input: +12.5 to +15 VDC, 1500mA Internal: NiMH battery: 10.8 volts, 1800 mA maximum

Dimensions:

Size (w x h x d): 254 mm x 178 mm x 61 mm (10.0 in x 7.0 in x 2.4 in)

Weight: <2.28 kg (<5 lbs) includes battery

## Ordering Information

#### **Base Model**

S412D Cable and Antenna Analyzer (25 MHz to 1.6 GHz), Spectrum Analyzer (100 kHz to 1.6 GHz),

and Power Meter (4.5 MHz to 1.6 GHz)

**Options** 

S412D-0005 Power Monitor (requires external detector)

S412D-0010

S412D-0019 High Accuracy Power Meter (PSN50 sensor not included) S412D-0021 Transmission Measurement

S412D-0025 Interference Analyzer (requires directional antenna)

S412D-0027 Channel Scanner

S412D-0031 GPS (includes GPS antenna) S412D-0520 P25 Tx Signal Analyzer

S412D-0522 P25 Talk-Out Coverage Measurements

(requires Option 0031)

S412D-0068 iDEN Signal Analyzer

#### Standard Accessories Include:

LMR Master User Guide (for Model S412D) 10580-00260 Anritsu Master Software Tools CDROM 2300-498

65717 Soft Carrying Case

633-27 Rechargeable Battery, NiMH AC-DC Adapter with Power Cord 40-168-R

806-141 Automotive Cigarette Lighter/12 Volt DC Adapter

800-441 Serial Interface Cable 551-1691-R USB to RS232 adapter cable

One Year Warranty

#### **Optional Accessories**

1N50C Limiter, N(m) to N(f), 50  $\Omega$ , 10 MHz to 18 GHz 42N50-20 Attenuator, 20 dB, 5 watt, DC to 18 GHz, N(m)-N(f) 42N50A-30 Attenuator, 30 dB, 50 watt, DC to 18 GHz, N(m)-N(f) 1010-127-R Attenuator, 40 dB, 150 watt, DC to 3 GHz, N(m)-N(f)

#### **Calibration Components**

InstaCal™ Calibration Module, 2 MHz to 6.0 GHz, ICN50B

N(m), 50  $\Omega$ 

Open/Short, DC to 18 GHz, N(m), 50  $\Omega$ 22N50 22NF50 Open/Short, DC to 18 GHz, N(f), 50 Q SM/PL-1 Precision Load, DC to 6 GHz, 42 dB, N(m), 50 Ω SM/PLNF-1 Precision Load, DC to 6 GHz, 42 dB, N(f), 50 Ω OSLN50-1 Precision Open/Short/Load, DC to 6 GHz,

42 dB, 50 Ω, N(m)

Precision Open/Short/Load, DC to 6 GHz, OSLNF50-1

42 dB, 50 Ω, N(f)

2000-767 Precision Open/Short/Load, DC to 4 GHz,

7/16 DIN(m), 50 Ω

2000-768 Precision Open/Short/Load, DC to 4 GHz,

7/16 DIN(f), 50 Ω

#### **Test Port Cables**

806-186-R Cable, 0.91 meters, N(m)-N(f), 4 GHz, 50 Ω 806-187-R Cable, 0.91 meters, N(m)-N(m), 4 GHz, 50 Ω

#### Phase Stable Test Port Cables Armored

15NN50-1.5C Test Port Cable Armored, 1.5 meters, N(m)-N(m), 6 GHz. 50 Ω 15NN50-3.0C Test Port Cable Armored, 3.0 meters, N(m)-N(m), 6 GHz, 50 Ω 15NN50-5.0C Test Port Cable Armored, 5.0 meters, N(m)-N(m), 6 GHz. 50 Ω 15NNF50-1 5C Test Port Cable Armored, 1.5 meters, N(m)-N(f), 6 GHz. 50 Ω 15NNF50-3.0C Test Port Cable Armored, 3.0 meters, N(m)-N(f), 6 GHz. 50 Ω 15NNF50-5.0C Test Port Cable Armored, 5.0 meters, N(m)-N(f), 6 GHz, 50 Ω 15ND50-1.5C Test Port Cable Armored, 1.5 meters, N(m)-7/16 DIN(m), 6 GHz, 50 Ω 15NDF50-1.5C

Test Port Cable Armored, 1.5 meters, N(m)-7/16 DIN(f),

6 GHz. 50 Ω

15RNFN50-1.5-R Test Port Cable Armored with Reinforced Grip, 1.5 meters,

N(m)-N(f), 6 GHz 50  $\Omega$ 

#### Adapters

34NN50A 34NFNF50	Precision Adapter, N(m)-N(m), DC to 18 GHz, 50 $\Omega$ Precision Adapter, N(f)-N(f), DC to 18 GHz, 50 $\Omega$
1091-26	Adapter, N(m)-SMA(m), DC to 18 GHz, 50 $\Omega$
1091-27	Adapter, N(m)-SMA(f), DC to 18 GHz, 50 Ω
1091-80-R	Adapter, N(f)-SMA(m), DC to 18 GHz, 50 Ω
1091-81-R	Adapter, N(f)-SMA(f), DC to 18 GHz, 50 Ω
1091-172	Adapter, N(m)-BNC(f), DC to 1.3 GHz, 50 Ω
510-90	Adapter, 7/16 DIN(f)-N(m), DC to 7.5 GHz, 50 $\Omega$
510-91	Adapter, 7/16 DIN(f)-N(f), DC to 7.5 GHz, 50 Ω
510-92	Adapter, 7/16 DIN(m)-N(m), DC to 7.5 GHz, 50 $\Omega$
510-93	Adapter, 7/16 DIN(m)-N(f), DC to 7.5 GHz, 50 $\Omega$
510-96	Adapter, 7/16 DIN(m)-7/16 DIN(m), DC to 7.5 GHz, 50 $\Omega$
510-97	Adapter, 7/16 DIN(f)-7/16 DIN(f), DC to 7.5 GHz, 50 $\Omega$
510-102	Adapter, N(m)-N(m) 90° right angle, DC to 11 GHz, 50 $\Omega$
513-62	Adapter, TNC(f)-N(f), 18 GHz, 50 Ω
1091-315	Adapter, TNC(m)-N(f), 18 GHz, 50 Ω
1091-324	Adapter, TNC(f)-N(m), 18 GHz, 50 Ω
1091-325	Adapter, TNC(m)-N(m), 18 GHz, 50 Ω

#### **Bandpass Filters**

1091-317

1091-318

1030-105-R	Filter, Bandpass, 890 to 915 MHz, N(m) to SMA(f), 50 $\Omega$
1030-109-R	Filter, Bandpass, 824 to 849 MHz, N(m) to SMA(f), 50 $\Omega$
1030-110-R	Filter, Bandpass, 880 to 915 MHz, N(m) to SMA(f), 50 Ω

Adapter, TNC(m)-SMA(f), 18 GHz, 50 Ω

Adapter, TNC(m)-SMA(m), 18 GHz, 50 Ω

#### Portable Antennas

2000-1035	SMA(m), 846 to 941 MHz, 50 $\Omega$
2000-1200	SMA(m), 806 to 869 MHz, 50 $\Omega$
2000-1473	SMA(m), 870 to 960 MHz, 50 $\Omega$

#### **Directional Antennas**

2000-1411 Portable Yagi Antenna, 10 dBd, N(f), 822 to 900 MHz 2000-1412 Portable Yagi Antenna, 10 dBd, N(f), 885 to 975 MHz

## Ordering Information (Continued)

#### Miscellaneous Accessories

800-441

2300-498

2000-1410 Magnet Mount GPS Antenna with 15 ft. (4.57 m) cable 551-1691-R USB to RS-232 adapter cable 67135 Backpack, 25 lb. max weight limit 65717 Soft Carrying Case 760-243-R Transit Case 633-27 Rechargeable Battery, NiMH 2000-1029 Battery Charger, NiMH, w/ Universal Power Supply 40-168-R AC/DC Adapter Automotive Cigarette Lighter/12 Volt DC Adapter 806-141 Serial Interface Cable

Master Software Tools CDROM

#### **High Accuracy Power Meter Accessories**

PSN50 High Accuracy Power Sensor, 50 MHz to 6 GHz 40-168-R AC-DC Adapter 800-441 Serial Interface Cable 3-1010-122 Attenuator, 20 dB, 5 Watt, DC to 12.4 GHz, N(m)-N(f) 3-1010-123 Attenuator (Bi-directional), 30 dB, 50 Watt, DC to 8.5 GHz, N(m)-N(f) 3-1010-124 Attenuator (Uni-directional), 40 dB, 100 Watt, DC to 8.5 GHz. N(m)-N(f) Attenuator, 30 dB, 150W, DC to 3 GHz, N(m)-N(f) 1010-127-R Attenuator, 40 dB, 150W, DC to 3 GHz, N(m)-N(f) 1010-128-R 65701 3 GHz Offset Cal Kit consisting of one each: 3-1010-119, 10 dB Attenuator, DC to 6 GHz, 2W 3-806-151, 4 GHz Cable, 18" (46 cm)

#### **Manuals**

10580-00260 LMR Master User Guide (for Model S412D) 10580-00261 LMR Master Programming Manual (for Model S412D)

#### **Training Course**

10580-00263 Interference Analysis for Land Mobile Radio

#### Power Monitor - Detectors

The 5400 and 560 Series Detectors use zero-biased Schottky diodes. Measurement range is -55 dBm to +16 dBm using single cycle per sweep AC detection, auto-zeroing with DC detection during the frequency sweep. Extender cables of over 3000 feet (914.4 meters) can be used with the S412D LMR Master.

Model	Frequency Range	Impedance	Return Loss	Input Connector	Frequency Response
5400-71N50	0.001 to 3 GHz	50 Ω	26 dB	N(m)	±0.2 dB, <1 GHz ±0.3 dB, <3 GHz
5400-71N75	0.001 to 3 GHz	75 Ω	26 dB, <2 GHz 20 dB, <3 GHz	N(m)	±0.2 dB, <1 GHz ±0.5 dB, <3 GHz
560-7N50B	0.01 to 20 GHz	50 Ω	15 dB, <0.04 GHz 22 dB, <8 GHz 17 dB, <18 GHz 14 dB, <20 GHz	N(m)	±0.5 dB, <18 GHz ±1.25 dB, <20 GHz
560-7S50B	0.01 to 20 GHz	50 Ω	15 dB, <0.04 GHz 22 dB, <8 GHz 17 dB, <18 GHz 14 dB, <20 GHz	WSMA(m)	±0.5 dB, <18 GHz ±1.25 dB, <20 GHz
560-7K50	0.01 to 40 GHz	50 Ω	12 dB, <0.04 GHz 22 dB, <8 GHz 17 dB, <18 GHz 15 dB, <26.5 GHz 14 dB, <32 GHz 13 dB, <40 GHz	K(m)	±0.5 dB, <18 GHz ±1.25 dB, <26.5 GHz ±2.2 dB, <32 GHz ±2.5 dB, <40 GHz
560-7VA50	0.01 to 50 GHz	50 Ω	12 dB, <0.04 GHz 19 dB, <20 GHz 15 dB, <40 GHz 10 dB, <50 GHz	V(m)	±0.8 dB, <20 GHz ±2.5 dB, <40 GHz ±3.0 dB, <50 GHz

#### **Detector Extension Cables**

800-109 7.6 m (25 ft.) 800-111 30.5 m (100 ft.)



#### Anritsu Corporation

5-1-1 Onna, Atsugi-shi, Kanagawa, 243-8555 Japan Phone: +81-46-223-1111 Fax: +81-46-296-1264

#### · USA

#### **Anritsu Company**

1155 East Collins Boulevard, Suite 100, Richardson, Texas 75081 U.S.A.
Toll Free: 1-800-ANRITSU (267-4878)
Phone: +1-972-644-1777 Fax: +1-972-671-1877

#### Canada

#### Anritsu Electronics Ltd.

700 Silver Seven Road, Suite 120, Kanata, Ontario K2V 1C3 Canada Phone: +1-613-591-2003 Fax: +1-613-591-1006

#### Brazil

#### Anritsu Electrônica Ltda.

Praca Amadeu Amaral, 27-1 Andai 01327-010 - Paraiso, São Paulo, Brazil Phone: +55-11-3283-2511 Fax: +55-11-3886940

#### Mexico

Anritsu Company, S.A. de C.V. Av. Ejército Nacional No. 579 Piso 9, Col. Granada 11520 México, D.F., México Phone: +52-55-1101-2370 Fax: +52-55-5254-3147

#### • U.K.

#### Anritsu EMEA Ltd.

200 Capability Green, Luton, Bedfordshire LU1 3LU, U.K. Phone: +44-1582-433200 Fax: +44-1582-731303

#### France Anritsu S.A.

16/18 Avenue du Québec-SILIC 720 91961 COURTABOEUF CEDEX, France Phone: +33-1-60-92-15-50

Fax: +33-1-64-46-10-65

#### Germany Anritsu GmbH

Nemetschek Haus, Konrad-Zuse-Platz 1 81829 München, Germany Phone: +49 (0) 89 442308-0 Fax: +49 (0) 89 442308-55

#### Italy

#### Anritsu S.p.A.

Via Elio Vittorini, 129, 00144 Roma, Italy Phone: +39-06-509-9711

Fax: +39-06-502-2425

#### Anritsu AB

#### Borgafjordsgatan 13, 164 40 Kista, Sweden

Phone: +46-8-534-707-00 Fax: +46-8-534-707-30

#### Finland Anritsu AB

Teknobulevardi 3-5, FI-01530 Vantaa, Finland

Phone: +358-20-741-8100 Fax: +358-20-741-8111

#### Denmark Anritsu A/S

Kirkebjerg Allé 90 DK-2605 Brøndby, Denmark Phone: +45-72112200

Fax: +45-72112210

#### Spain Anritsu EMEA Ltd.

#### Oficina de Representación en España

Edificio Veganova Avda de la Vega, nº 1 (edf 8, pl1, of 8)

28108 ALCOBENDAS - Madrid, Spain Phone: +34-914905761 Fax: +34-914905762

#### • Russia

#### Anritsu EMEA Ltd.

#### Representation Office in Russia

Tverskaya str. 16/2, bld. 1, 7th floor. Russia, 125009, Moscow Phone: +7-495-363-1694 Fax: +7-495-935-8962

#### United Arab Emirates Anritsu EMEA Ltd. **Dubai Liaison Office**

P O Box 500413 - Dubai Internet City Al Thuraya Building, Tower 1, Suite 701, 7th Floor

Dubai, United Arab Emirates Phone: +971-4-3670352 Fax: +971-4-3688460

#### Singapore

#### Anritsu Pte. Ltd.

60 Alexandra Terrace, #02-08, The Comtech (Lobby A) Singapore 118502

Phone: +65-6282-2400 Fax: +65-6282-2533

#### • India

#### Anritsu Pte. Ltd. **India Branch Office**

3rd Floor, Shri Lakshminarayan Niwas, #2726, HAL 3rd Stage, Bangalore - 560 038, India

Phone: +91-80-4058-1300 Fax: +91-80-4058-1301

#### • P. R. China (Hong Kong) Anritsu Company Ltd.

Units 4 & 5, 28th Floor, Greenfield Tower, Concordia Plaza, No. 1 Science Museum Road, Tsim Sha Tsui East,

Kowloon, Hong Kong, P.R. China

Phone: +852-2301-4980 Fax: +852-2301-3545

#### • P. R. China (Beijing) Anritsu Company Ltd. **Beijing Representative Office**

Room 2008, Beijing Fortune Building, No. 5, Dong-San-Huan Bei Road Chao-Yang District, Beijing 100004, P.R. China

Phone: +86-10-6590-9230 Fax: +82-10-6590-9235

#### Korea

#### Anritsu Corporation, Ltd.

8F Hyunjuk Bldg. 832-41, Yeoksam-Dong, Kangnam-ku, Seoul, 135-080, Korea Phone: +82-2-553-6603

Fax: +82-2-553-6604

#### Australia Anritsu Pty Ltd.

Unit 21/270 Ferntree Gully Road, Notting Hill

Victoria, 3168, Australia Phone: +61-3-9558-8177 Fax: +61-3-9558-8255

#### Taiwan

#### Anritsu Company Inc.

7F, No. 316, Sec. 1, Neihu Rd., Taipei 114, Taiwan Phone: +886-2-8751-1816

Fax: +886-2-8751-1817



