



Advanced Test Equipment Rentals
 www.atecorp.com 800-404-ATEC (2832)

Ameritec


AM8a PCM/VF Call Analyzer

**Complete Emulation and Analysis of
T1 and Analog Signaling**



760 Arrow Grand Circle • Covina CA 91722 • +626 915 5441 • www.ameritec.com

- Signalling Monitor/Emulator
- Dialed Digit Monitor/Emulator
- Dialed Digit Analyzer
- Complex Sequence Dialer
- VF Level, Frequency, Noise Measure
- Dual Multimeter
- DS1 PCM Drop & Insert
- Non-Intrusive PCM Measure
- SLC[®] 96 Monitoring
- CO Battery, Ring Generator, and Dial Tone Generator Sources

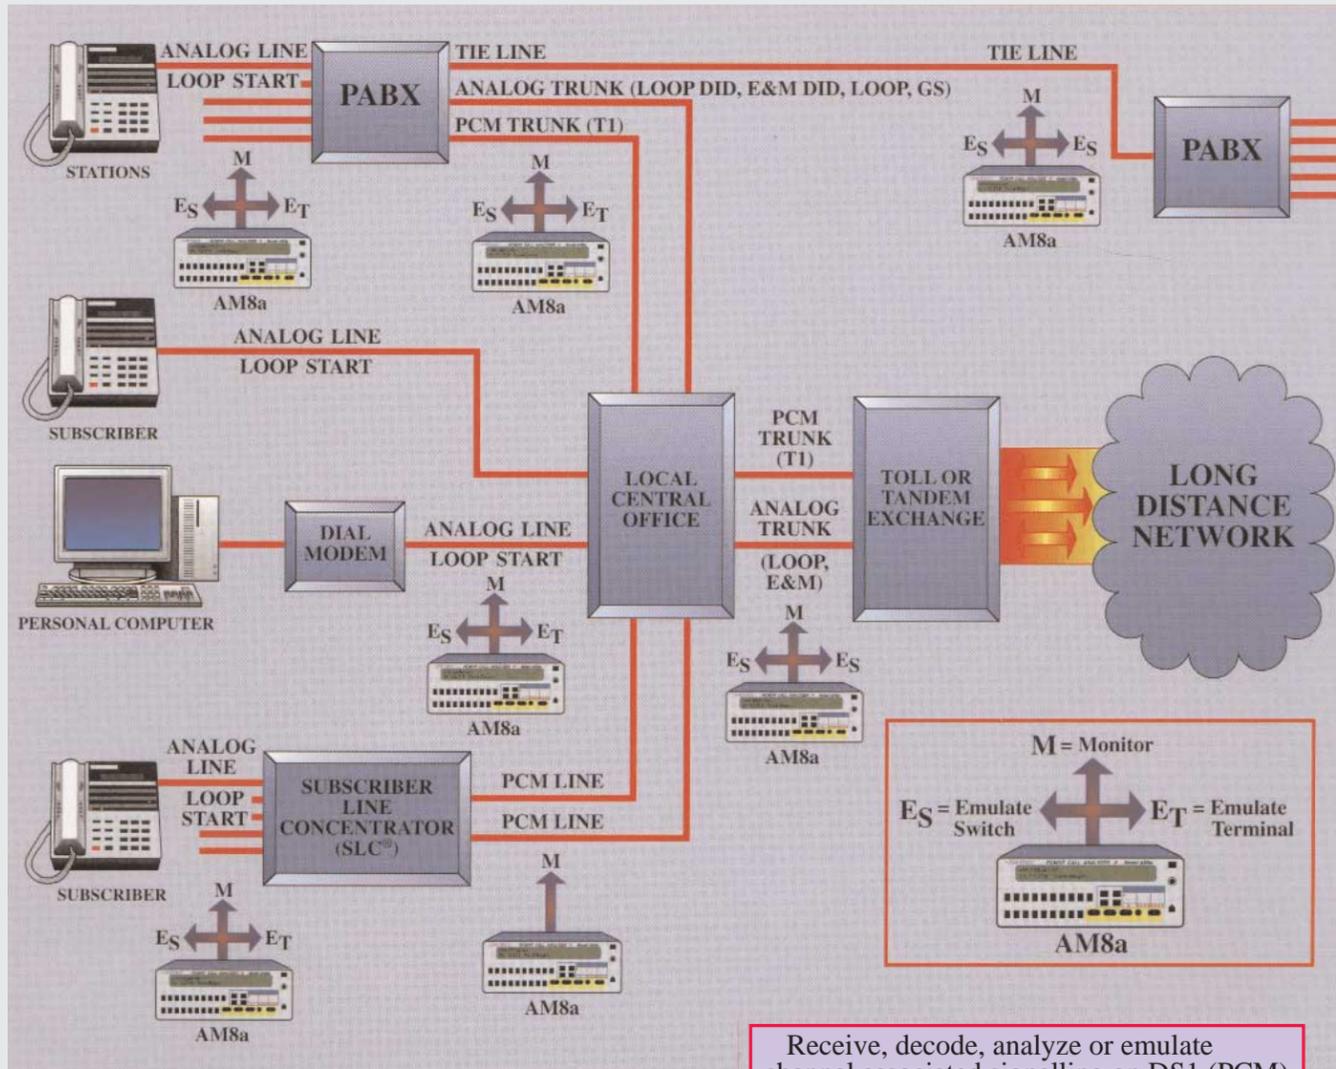

Introduction

In a switched public or private telephone network, "signalling" is the process of setting up a call connection through the network at the beginning of a call and tearing it down at the end of the call.

A businessman using his telephone sends "signals" into his PBX, the PBX "signals" the local central office, the local central office "signals" into a long distance carrier and so on.

The Ameritec Model AM8a is a Call Analyzer capable of observing and troubleshooting signalling problems on a wide variety of analog or channel-associated PCM circuits.

Receive, decode, analyze or emulate channel associated signalling on DS1 (PCM) circuits or analog lines and trunks.

Analog
 2w Loop Start
 2w Ground Start
 2w E&M
 4w E&M
 DID
 SF
 SS4

1.544 Mbps PCM (DS1)
 D3/D4
 ESF
 SLC® Mode I *
 SLC® Mode II *

* Monitor Only

Built-in Programmable Emulation:
 • C.O. Battery Supply
 • Ring Generator
 • Dial Tone Generator
 • Pulse and DTMF/MF Tone Dialling Generator
 • Tone Generator

Built-in Programmable Analysis:
 • Pulse/Tone/Signalling event receiver, decoder, analyzer
 • AC/DC Voltmeter

The AM8a is capable of non-intrusive monitoring or intrusive emulation at most points in the signalling path.

Highly portable and battery powered, it is equally useful in the field, in the switch room or in laboratory applications.

PABX Demarcation Testing

The AM8a can monitor or emulate the station (line) side or the central office (trunk) side of a PABX. The PABX can be emulated for the purpose of testing the central office trunk signalling, or the central office can be emulated looking toward the PABX.

The AM8a has built-in central office battery power supply, loop length emulation, ring generator and dial tone generator. All of which are variable, and programmable to provide for a wide variety of test configurations. These facilities, for example, allow the unit to simulate *DID* or *911* terminal equipment.

Limit testing of all signalling parameters is possible due to the full programmability of the built-in generators and the detailed signalling decode and analysis capability of the built-in receivers.

Precise one millisecond time tagging of all decoded signalling events allows easy identification of signalling timing problems.

At the PBX or at the central office, demarcation testing is simple and comprehensive.

Inter-Exchange or Long Distance Carrier Testing

Monitoring or troubleshooting of analog or 1.544 Mbps PCM trunks is easy with the AM8a.

The unit can non-intrusively monitor a T1 span and either camp on a specific channel or scan channels for new both-way activity. Signalling detection is completely automatic as the unit automatically differentiates between dial pulse, DTMF or MF signalling and decodes them appropriately. No more missing unanticipated events.

When moving the unit around the central office to different trunk types, reconfiguration of the AM8a is easily accomplished through the set-up "Store and Recall" feature.

It is even possible to print out exception reports by connecting an accessory printer and using the built-in signalling thresholds feature to automatically screen for problems. This is a very effective feature when dealing with intermittent or elusive problems.

Subscriber Line Concentrator (SLC®) Testing

The AM8a provides a full, comprehensive analysis of AT&T SLC®96 PCM circuits (or industry equivalent). Signalling problems between the central office and an AT&T SLC®96 remote terminal are easy to detect and troubleshoot using the AM8a as a signalling monitor.



AM8a and printer with printout showing SLC®96 channel assignment.

Together with the optional hard copy output capability, the AM8a provides a printed activity report in addition to a powerful problem solving tool.

The following SLC®96 analysis features are provided:

1. Ability to monitor SLC®96 Mode I (unconcentrated) and Mode II (concentrated) calls and record signalling transitions (off/on hook, digits, tones, etc.)
2. Ability to monitor the 4 Kbps data link in Mode II and time stamp to 1ms accuracy any or all Concentrator Field Messages sent by both the RT and the integrated SLC®.
3. Provide monitoring of all Maintenance, Protection and Alarm Field change of values in both TX and RX directions.
4. Ability to map a specific channel to its appropriate time slot assignment for Mode II operation.
5. Programmable display fields to allow the user to analyze all events or only those exceeding programmed thresholds.

Detailed Digit, Event Analysis

When connected to a circuit, the unit will display signaling events occurring in either direction on a large backlighted liquid crystal display (LCD). Up to 80 dialed digits and/or events (on hook, off hook, wink, etc.) may be collected and displayed for each call.

By merely placing a cursor under the digit or event of interest, the operator can observe, on the second line of the display, all details associated with that event. For example, when selecting a DTMF digit, the unit will display the time of the digit and its duration, as well as the measured high and low band frequency and level.

If the operator had previously entered good/bad mask parameters, then any out-of-spec detail would be high-lighted to the operator.


With each event in a complex sequence captured in detail, troubleshooting becomes a matter of *solving* the problem instead of *searching* for the problem.

Built-in Analog and PCM Testing

The ability to measure VF level, frequency and noise on analog circuits is built into the AM8a.

The unit also provides a variety of non-intrusive PCM digital tests, including bit and frame slips, CRC errors, framing errors, bi-polar violations, yellow and blue alarms.

For more extensive analog or channel-associated PCM testing, a port is provided (labeled TIMS) which allows connection of a full range test set such as the Ameritex Model AM5XT.

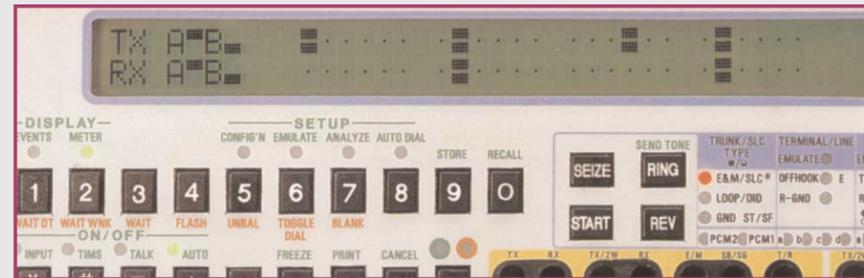


Display of A/B signalling bits for all 24 T1 time slots (transmit and receive).

Complex Sequence Auto-Dialer

Through a front panel keypad the operator can dial any sequence of digits and events either manually or automatically.

Up to 10 complex dialing sequences can be stored and later recalled for execution under the "auto dial" function.

For example, the following sequence might be used to initiate test calls from a PABX station and use multiple signalling modes to reach and communicate with specialized equipment.

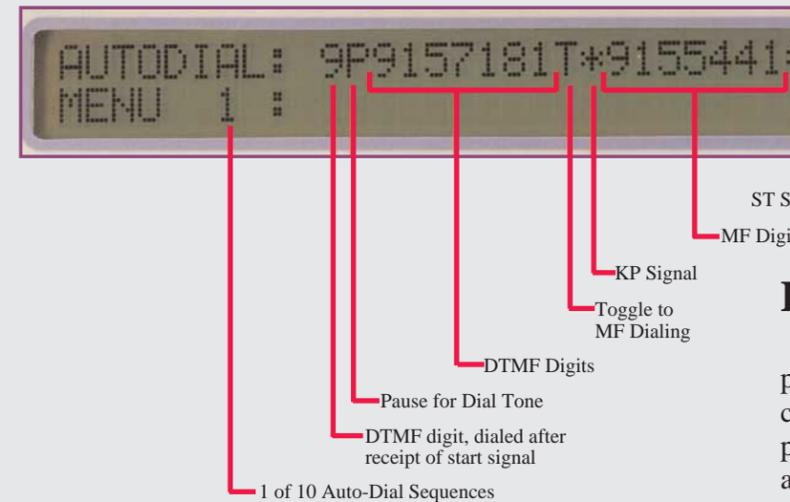

Easy Setup

Commonly used AM8a test setups can be stored in non-volatile memory for later use. 20 non-volatile memories are available for instant recall of personalized AM8a configuration setups.




Easy setup store and recall.

An additional 20 memories are available for recall of emulate/analyze parameters. This is in addition to the previously mentioned memories for 10 auto-dial sequences plus last number redial.

High Tech, Small Size

The AM8a incorporates multiple digital signal processors and microprocessors in a highly compact portable package. The unit may be powered from commercial mains where it automatically adjusts for compatibility with local line voltage and frequency, or it may be powered from an optional internal rechargeable battery pack. An optional RS232 port and aux port allows for automatic hard copy reporting and remote control. A 24-pin LINE/TIMS connector on the rear of the AM8a provides secondary access to all front panel connections and is useful for permanent AM8a installations in systems and other test equipment.

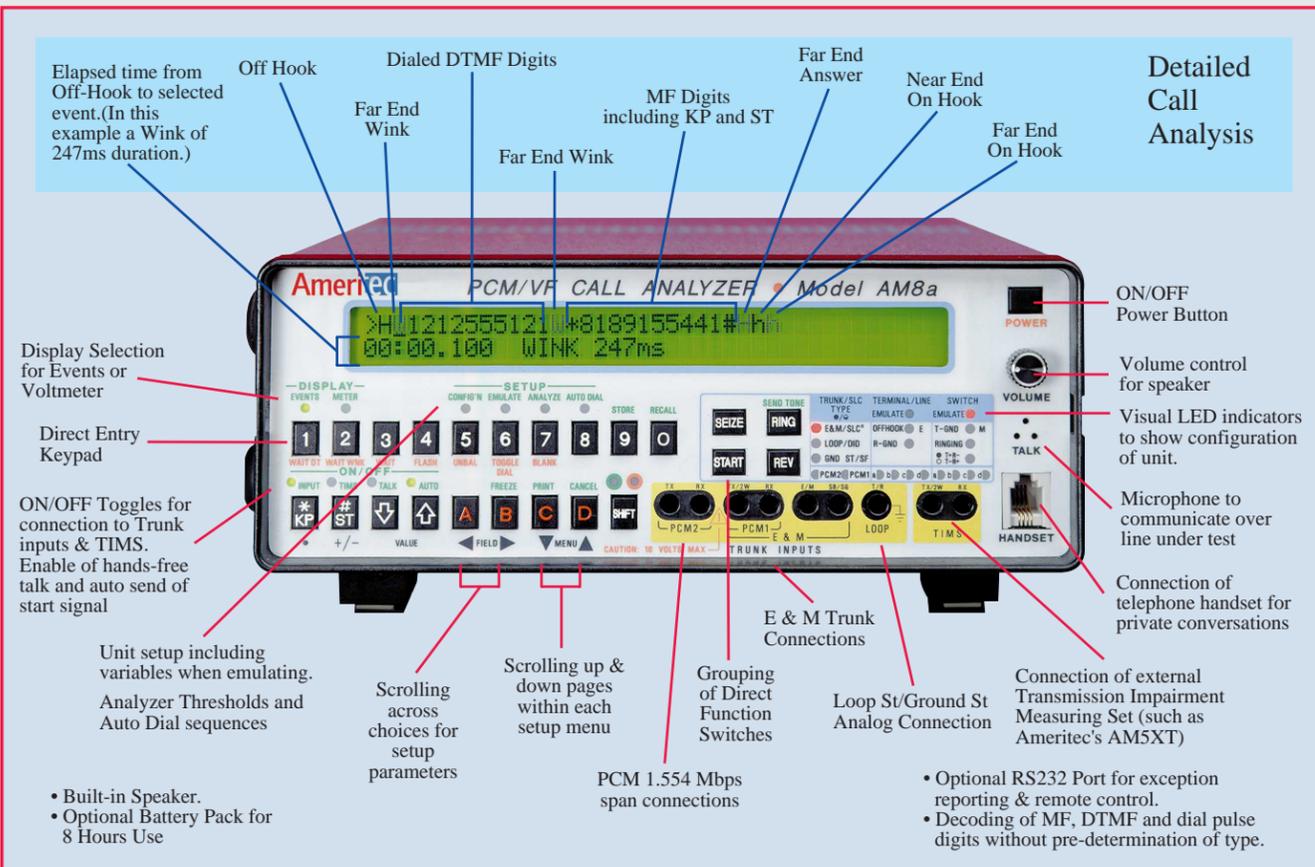

Detailed Call Analysis


PCM Drop & Insert

The AM8a provides two PCM ports with dual receivers and transmitters. These ports can be used for passive monitoring of a PCM span or the AM8a may be inserted in series with the PCM span for full duplex drop and insert testing of individual channels.



Dual PCM ports.


The two PCM ports can also be used for clock synchronization testing of PCM spans where one port is connected to a reference span while the second port is connected to the span under test.

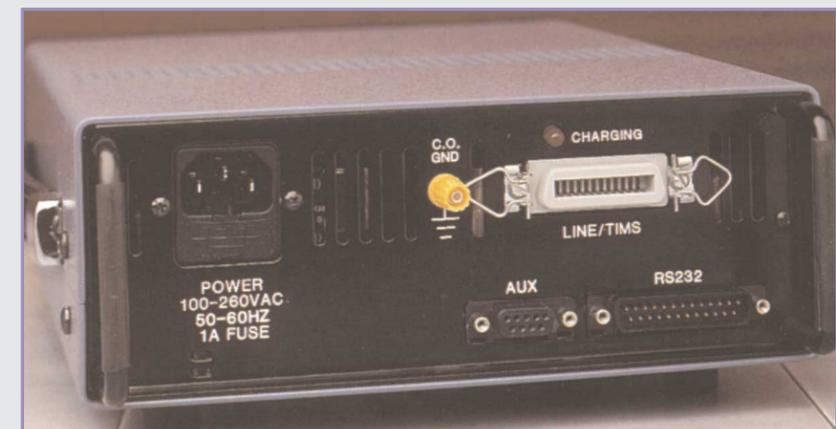

Rear of AM8a with RS232 ports for hard copy output and remote control.

Built-in Voltmeter

A dual multimeter with analog and digital display is provided. AC volts, DC volts, and current measurements may be operator selected for tip to ring, tip to ground or ring to ground connections. A display of all 24 PCM channel A/B bits can also be viewed.

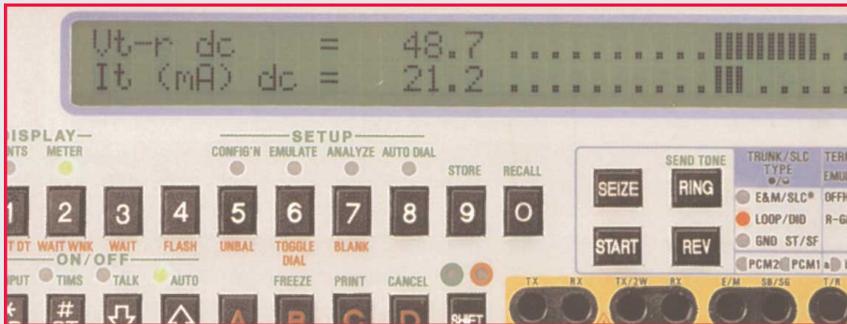

Dual multimeter display showing battery and loop current measurements.

Accessories and Options

Provided

Model AM8a, removable front cover with storage, power cord, monitor cables and instruction manual.

Optional Battery

An optional internal, rechargeable battery pack is available for full portable "cordless" operation. The batteries are of sealed lead-acid type and require no maintenance. A front panel low battery indicator indicates when recharging is needed.

The built-in charger allows the batteries to be charged even while the unit is in operation.

Portable or Rack Mount

No other signaling test set of this type is as full featured, small and convenient. About the size and weight of a telephone directory, it is easily transported from lab to field. For permanent installations, a rack mounting kit is available which will allow 19" relay rack mounting in only two rack increments of space.



AM8a with manual, cables, cover, and optional soft carrying case.



AM8a shown in rack mount configuration.

Options

- 25-0071** RS232 Remote Control Port with Auxiliary RS232 Output Port.
- 24-0018** Internal Power Pack (Sealed Rechargeable Lead Acid Batteries) and Internal Charger.
- 85-0076** 19" Rack Mount Kit.
- 48-0062** 6 Ft. Bantam to Clip Input Cable.
- 48-0047** 6 Ft. Bantam to Bantam Input Cable.
- 48-0048** 6 Ft. Bantam to 310 Input Cable.
- 87-0070** Padded Carrying Case